





BOXTER

HOOD INSTALLATION MANUAL

ENGLISH V 1.6

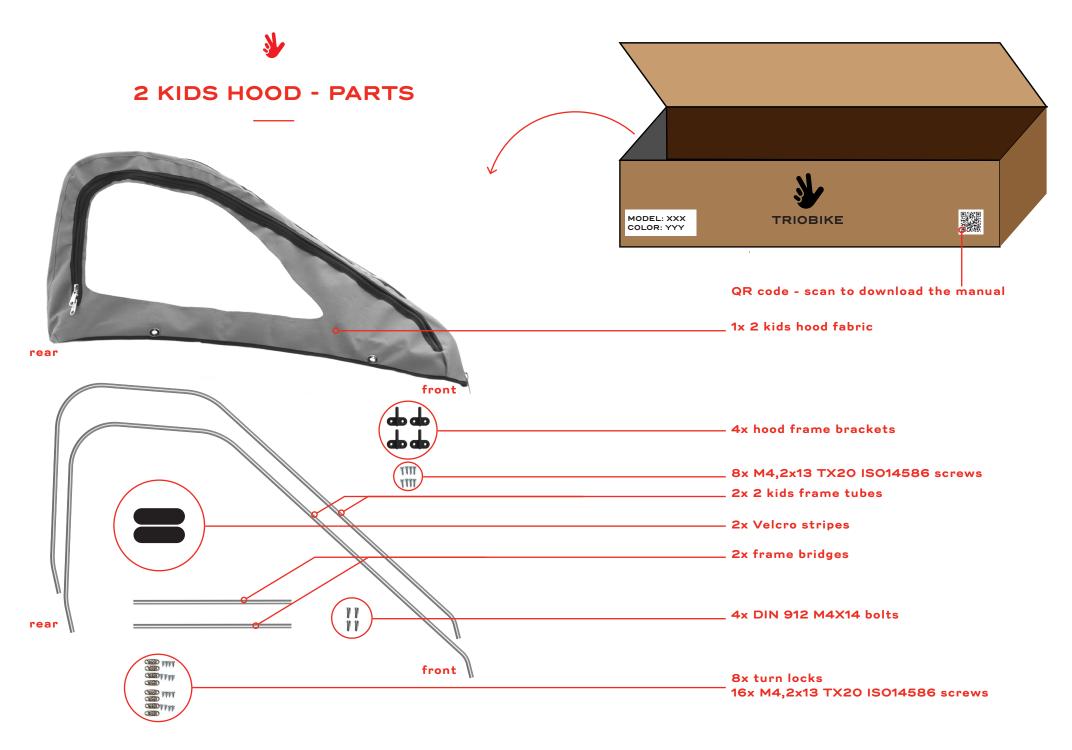

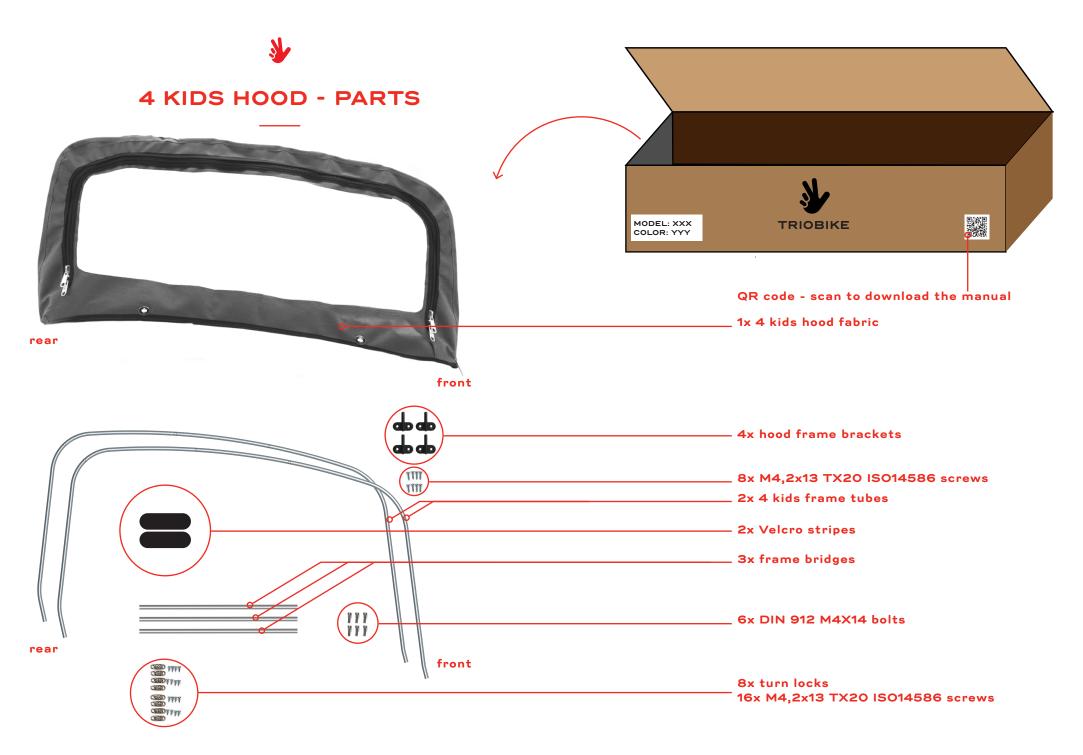

INSTALLING THE HOOD



1- Open the box and place the parts on a flat and clean surface.

2- Take the 4 mounting brackets and mount them on the prepared positions using 2xM4.2x13 screws on each bracket. Use 3 Nm (2,21 ft-lb) force.



4- Take the 2 side frame tubes and insert them into the front and rear brackets pins. The big holes have to point to the outside.





5- Take the 2 (2 kids hood) or 3 (4 kids hood) short straight bars and fix them to the side frame tubes with the DIN912 M4x14 screws.





7- Take the 8 turn locks and mount them on the prepared positions, shown by the red circles, using 2x M4.2x13 screws on each lock. Use 3 Nm (2,21 ft-lb) force.

8- Take the fabric cover and put it on the frame, placed symmetrically. Close the Velcro stripes placed on the inside of the hood fabric, in the positions shown by the blue circles, around the metal frame.

9- Fix the fabric cover with the turn locks, twisting them.



TRIOBIKE A/S Vesterbrogade 149, 1620 Copenhagen V - Denmark phone: +45 3670 0070 info@triobike.dk | www.triobike.com